
Installing and Operating Instructions

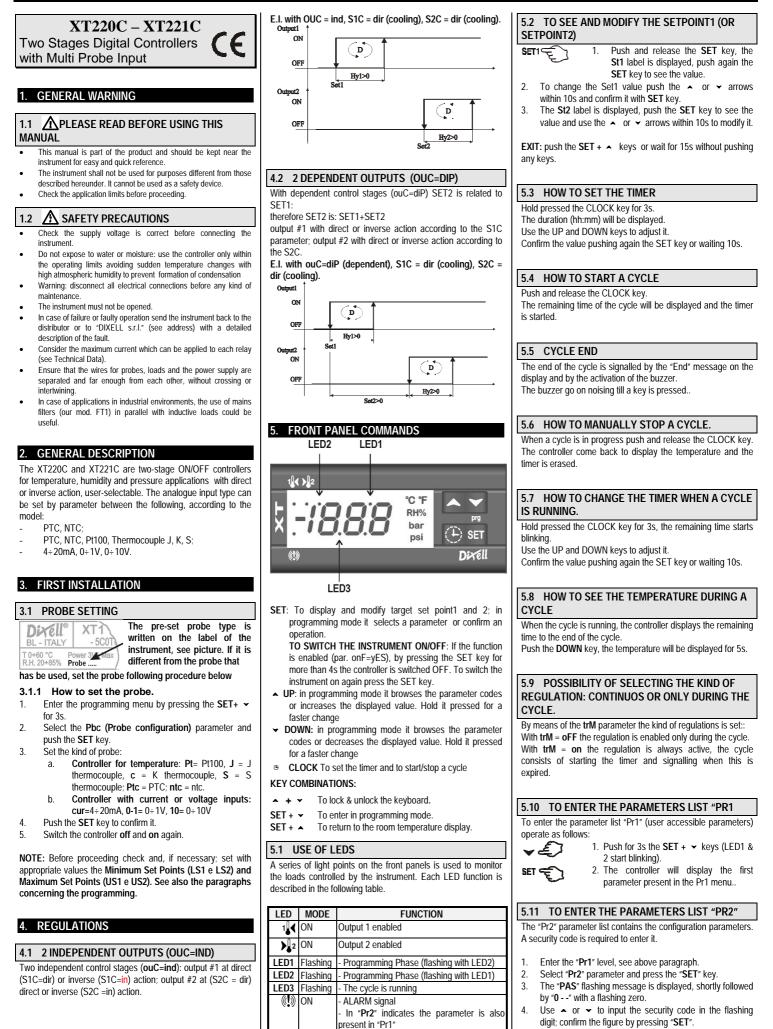

Dixell

Installing and Operating Instructions

The security code is "321".

5. If the security code is correct the access to "Pr2" is enabled by pressing "SET" on the last digit.

Another possibility is the following:

After switching ON the instrument, within 30 seconds, push

5.12 HOW TO MOVE A PARAMETER FROM THE "PR2" MENU TO "PR1" AND VICEVERSA.

Each parameter present in "Pr2" MENU can be removed or put

into "Pr1", user level, by pressing "SET + ~ "

In "Pr2" when a parameter is present in "Pr1" the LED (()) is on

5.13 HOW TO CHANGE A PARAMETER

- To change a parameter value operates as follows:
- Enter the Programming mode 1
- 2. Select the required parameter.
- Press the "SET" key to display its value. 3.
- Use "UP" or "DOWN" to change its value. 4. Press "SET" to store the new value and move to the 5 following parameter.

TO EXIT: Press SET + UP or wait 15s without pressing a key. NOTE: the set value is stored even when the procedure is exited by waiting the time-out to expire.

5.14 HOW TO LOCK THE KEYBOARD



- 1 Keep pressed for more than 3 s the the A and V keys. 2. The "POF" message will be displayed and the keyboard will be locked. At this point it will be possible only to see the set point or the MAX o Min temperature stored
- If a key is pressed more than 3s the "POF" message will 3. be displayed.

5.15 TO UNLOCK THE KEYBOARD

Keep pressed together for more than 3s the the \checkmark and \checkmark keys, till the "Pon" message will be displayed.

5.16 ON/OFF FUNCTION

TO SWITCH THE INSTRUMENT ON/OFF: If the function is enabled (par. onF=yES), by pressing the SET key for more than 4s the controller is switched OFF. To switch the instrument on again press the SET key

6. PROBES AND MEASURING RANGE

Down Scale	Full Scale
-40°C/-40°F	110°C/230°F
-50°C/-58°F	150°C/302°F
-200°C/-328°F	600°C/1112°F
0°C/32°F	1300°C / 1999°F
0°C/32°F	600°C/1112°F
0°C/32°F	1400°C / 1999°F
	-40° C/-40° F -50° C / -58° F -200° C / -328° F 0° C / 32° F 0° C / 32° F

7. LIST OF PARAMETERS

REGULATION

- Hy1 Intervention differential for set point1 (-Full Sc. / Full Sc.). It can be set with positive value or with negative value. The kind of action depends on the S1C parameter: dir = direct or in = inverse.
- Hy2 Intervention differential for set point2: (-Full Sc. / Full Sc.). It can be set with positive value or with negative value. The kind of action depends on the S2C parameter: dir = direct or in = inverse.
- LS1 Minimum set point1: (Down Sc.÷ Set1) Sets the minimum acceptable value for the set point1.
- LS2 Minimum set point2: (Down Sc.+ Set2) Sets the minimum acceptable value for the set point2.
- US1 Maximum set point1: (Set1+ Full Sc.) Sets the maximum acceptable value for set point1.
- US2 Maximum set point2: (Set2+ Full Sc.) Sets the maximum acceptable value for set point2.
- ouC Output connections (diP=dependent; ind=independent) select if SET2 is independent from SET1 or if the SET2 depends on SET1 (so Set2= SET1+SET2).
- S1C Action type output 1: S1C=in inverse action (heating/ humidifying /increase pressure); S1C=dir direct action (cooling / dehumidifying /decrease pressure).

1592002280 XT220-221C GB R.1.0 03.02.03.doc

- S2C Action type output 2: S2C=in inverse action (heating/ humidifying /increase pressure); S2C=dir direct action (cooling / dehumidifying /decrease pressure).
- Anti-short cycle delay: (0÷250 sec) Minimum time between the switching off and the following switching on AC
- on Minimum time a stage stays switched ON (0÷250 sec)
- ono: Minimum time between 2 following switching ON of the same load (0÷120 min).

CYCLE REGULATION

trd Cycle length setting (0÷19.59h)

trM Regulation setting

oFF the regulation is enabled only during the cycle. on the regulation is always active, the cycle consists of starting the timer and signalling when this has expired. trS

Timer exhausted signallin no the buzzer is not activated; yES: the buzzer is activated.

ALARMS

- ALC Alarms configuration: it determines if alarms are relative to set point1 or referred to absolute values.
- rE relative to set point1; Ab absolute temperature

ALL Minimum alarm:

with ALC=rE: relative to set point1, (0+ |Down Sc.-Set1|) this value is subtracted from the set point1. The alarm signal is enabled when the temperature goes below the "SET1-ALL" value

with ALC=Ab absolute temperature, (Down Scale ÷ ALu) minimum alarm is enabled when the temperature goes below the "ALL" value.

ALU Maximum alarm:

with ALC=rE: alarm relative to set point1, (0+|Full Sc.-Set1) Maximum alarm is enabled when the temperature exceeds the "SET1+ALU" value.

with ALC=Ab: absolute alarm, (ALL+Full Sc.) Maximum alarm is enabled when the temperature exceeds the "ALU" value

ALH Temperature alarm for alarm recovery: (0,1÷Full scale) Differential for alarm reset, always positive

ALd Alarm delay:(0÷999 min) time interval between the detection of an alarm condition and alarm signalling.

- dAo Delay of alarm at start-up: (0+23.5h) time interval between the detection of the alarm condition after instrument power on and alarm signalling.
- So1 Output 1 status with faulty probe: So1=oFF open; So1=on closed.
- So2 Output 2 status with faulty probe: So2=oFF open; So2=on closed.
- tbA Status of alarm relay after pushing a key. (XT221C only): oFF = relay disabled; on = relay enabled.
- AS Alarm relay configuration (XT221C only): cL = 5-6 terminals open with alarm; oP = 5-6 terminals closed with alarm

PROBES AND DISPLAY

- LCI Start of scale, only with current or voltage input: (-1999÷1999) Adjustment of read out corresponding to 4mA or 0V input signal.
- UCI End of scale, only with current or voltage input (-1999÷1999) Adjustment of read out corresponding to
- 20mA or 1V or 10V input signal. oPb Probe calibration: (-Full sc.+Full sc.) allows to adjust
- possible offset of the probe.
- rES Decimal point ON/OFF: (rES=in OFF; rES=dE ON; rES= cE with 2 decimal points, only for current or voltage input) select the resolution of the controller.
- NOTE: the decimal point selection is not available on models with thermocouple input.
- UdM Measurement unit: it depends on models: for temperature: °C = Celsius; °F = Fahrenheit. with 4÷20mA, 0÷1V, 0÷10V input : 0= °C; 1= °F, 2= %RH, 3=bar, 4=PSI, 5=no measurement unit.
- PbC Probe selection: it sets the kind of probe. It depends on models
 - for temperature NTC/PTC: Ptc = PTC; ntc = ntc. for temperature standard: Pt= Pt100, J = Jthermocouple, c = K thermocouple, S = S thermocouple;
- Ptc = PTC: ntc = ntc. with 4+20mA, 0+1V, 0+10V input : cur=4+20mA, 0-1=
- 0÷1V. 10= 0÷10V
- P3F Third wire presence for Pt100 probe: for using 2 or 3 wires Pt100 probes: no = 2 wires probe; yES = 3 wires probe

DIGITAL INPUT

HES Set point 1 changes during the Energy Saving cycle: (Down Sc./Full Sc.) sets the variation of the set point 1 during the Energy Saving cycle.

XT220C - XT221C


- i1F Digital input operating mode: configure the digital input function: c-H = to invert the kind of action: direct - reverse; oFF = to switch the controller off.; AUS = Not used; HES = Energy Saving; EAL = generic external alarm; bAL = serious external alarm: it switches off the loads. i1P Digital input polarity:
 - CL : the digital input is activated by closing the contact; OP : the digital input is activated by opening the contact
- did Digital input alarm delay: (0+120 min) delay between the detection of the external alarm condition (i1F= EAL or i1F = bAL) and its signalling.

OTHER

- Adr RS485 serial address (0÷247) identifies the instrument within a control or supervising system.
- Swithching ON/OFF enabling from keyboard: (no = onF disabled; yES=enabled) It permits the switching ON/OFF of the instrument by pressing the SET1 key for more than 45
- Ptb Parameters table: (read only) Shows the code of the parameters map.
- rEL Software release: (read only)
- Pr2 To access the Pr2 parameter programming menu.

INSTALLATION AND MOUNTING

Instrument XT220C and XT221C shall be mounted on vertical panel, in a 29x71 mm hole, and fixed using the special brackets supplied.



(PUSH TO RELEASE)

To obtain an IP65 protection grade use the front panel rubber gasket (mod. RG-C)

The temperature range allowed for correct operation is 0÷60 °C. Avoid places subject to strong vibrations, corrosive gases, excessive dirt or humidity. The same recommendations apply to probes. Let air circulate by the cooling holes.

9. ELECTRICAL CONNECTIONS

The instruments are provided with screw terminal block to connect cables with a cross section up to 2,5 mm². Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the input connection cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay

10. SERIAL CONNECTIONS

All models can be connected to the monitoring and supervising system XJ500 using the serial port. The external XJ485 serial module to interface the instrument with the monitoring and supervising system XJ500 is required.

The standard ModBus RTU protocol it is used.

NOTE: Instruments with current or voltage input and 230V or 115V supply, cannot be connected to the XJ485 serial module.

11.1 HOW TO PROGRAM A HOT KEY FROM THE

Program one controller with the front keypad.

Push "SET" key and the End will stop flashing.

NOTE: the "Err" message is displayed for failed programming.

In this case push again A key if you want to restart the upload

11.2 HOW TO PROGRAM AN INSTRUMENT USING

2/4

again or remove the "Hot key" to abort the operation.

When the controller is ON, insert the "Hot key" and push key; the "uPL" message appears followed a by flashing "End"

Turn OFF the instrument remove the "Hot Key", then

11. HOW TO USE THE HOT KEY

INSTRUMENT (UPLOAD)

turn it ON again.

A HOT KEY (DOWNLOAD)

Turn OFF the instrument

1.

2.

3

4.

Dixell

Installing and Operating Instructions

disabled

Protection: IP20.

Relay outputs:

14.

wiring.

15.1

8(3)A250\

Գ

8(3)A250V

ግ


1 2 3

/?

Linē

1 2

/Ŷ Line 1592002280

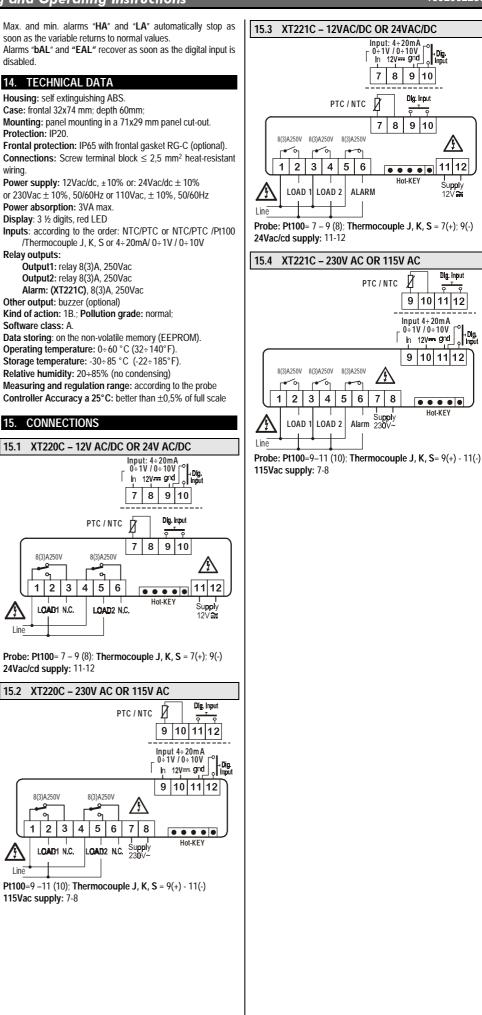

2.	Insert a programmed "Hot Key" into the 5 F	PIN
	receptacle and then turn the Controller ON.	
~		

- Automatically the parameter list of the "Hot Key" is 3. downloaded into the Controller memory, the "dol " message is blinking followed a by flashing "End".
- After 10 seconds the instrument will restart working with 4. the new parameters.
- 5. Remove the "Hot Key".

NOTE the message "Err" is displayed for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the "Hot key" to abort the operation

DIGITAL INPUT 12.

XT220C and XT221C have 1 free contact digital input. It is programmable in 5 different configurations by the "i1F" parameter.

12.1 INVERT THE KIND OF ACTION: HEATING-COOLING (I1F = C-H)

This function allows to invert the regulation of the controller for both the outputs: from direct to inverse and viceversa

12.2 REMOTE ON/OFF (I1F = OFF)

This function allows to switch ON and OFF the instrument.

12.3 GENERIC ALARM (I1F = EAL)

As soon as the digital input is activated the unit will wait for "did" time delay before signalling the "EAL" alarm message. The outputs status don't change. The alarm stops just after the digital input is de-activated.

12.4 SERIOUS ALARM MODE (I1F = BAL)

When the digital input is activated, the unit will wait for "did" delay before signalling the "bAL" alarm message. The relay outputs are switched OFF. The alarm will stop as soon as the digital input is de-activated.

12.5 ENERGY SAVING (I1F = HES)

The Energy Saving function allows to change the set point1 value as the result of the SET1+ HES (parameter) sum. This function is enabled until the digital input is activated.

13. ALARM SIGNALS

Message	Cause	Outputs
"PFo"	Probe broken or absence	Alarm output ON; Output 1 and 2 according parameters "So1" and "So2" respectively.
"PFc"	Probe short circuited	Alarm output ON; Output 1 and 2 according parameters "So1" and "So2" respectively.
"HA"	Maximum temperature alarm	Alarm output ON; Other outputs unchanged.
"LA"	Minimum temperature alarm	Alarm output ON; Other outputs unchanged.
"EAL"	External alarm	Output unchanged.
"bAL"	Serious external alarm	Output OFF.

13.1 ALARM RELAY STATUS (XT221C)

Status of the instrument	AS = CL	AS = oP
Instrument off	5-6 closed	5-6 closed
Normal operating	5-6 closed	5-6 open
Alarm present	5-6 open	5-6 closed

13.2 SIL ENCING BUZZER / ALARM RELAY OUTPUT

Once the alarm signal is detected the buzzer, if present, can be disabled by pressing any key.

XT221C: the alarm relay status depends on the tbA parameter: with tbA=yES the relay is disabled by pressing any key, with tbA=no the alarm relay remains enabled as long as the alarm lasts. The display signal remains as long as the alarm condition remains

13.3 ALARM RECOVERY

Probe alarms "PFo", "PFc" start few seconds after the fault in the probe; they automatically stop few seconds after the probe restarts normal operation. Check connections before replacing the probe

1592002280 XT220-221C GB R.1.0 03.02.03.doc

XT220C - XT221C

16	DEFAU	T SET	TING	
10.	DEFAU	LIJEI		ALUES

005	N-	D	0.0 m E	
COD	Name	Range	°C/°F	Lev
Set1	Set point1	LS1÷US1	0/32	-
Set2	Set point2	LS2÷US2	1/34	-
Hy1	Differential 1	-Full Sc./ Full Sc.	-1/-2	Pr1
Hy2	Differential 1	-Full Sc./ Full Sc.	-1/-2	Pr1
LS1	Minimum set point1	Down Sc./ Set1	min	Pr2
LS2	Minimum set point2	Down Sc./ Set2	min	Pr2
US1	Maximum set point1	Set1/ Full Sc.	max	Pr2
US2	Maximum set point2	Set2/ Full Sc.	max	Pr2
ouC	Output configuration	ind= independent; diP = dependent	ind	Pr2
S1C	Action type output 1	in= Inverse; dir=direct	in	Pr2
S2C	Action type output 2	in= Inverse; dir=direct	in	Pr2
Ac	Anti-short cycle delay:	0÷250 sec	0	Pr2
on	Minimum time a stage stays switched ON	0÷250 sec	0	Pr2
ono	Minimum time between 2 following switching ON of the same load	0÷120 min	0	Pr2
trd	Cycle length setting	0 ÷ 19:59 (0 = disable)	0,00	Pr2
trM	Regulation setting	oFF = stop regulation on = regulation continues	oFF	Pr2
trS	Timer exhausted	no = buzzer off	Yes	Pr2
	signalling	yES = buzzer on	-F	D-2
ALC		rE=relat.; Ab= absolute	rE	Pr2
ALL		Start Sc.÷ ALu	10.0/ 20	Pr2
ALU		ALL÷ Full Scale	10.0/ 20	Pr2
ALH	Alarm recovery differential	0÷Full scale	2.0/4	Pr2
ALd	Alarm delay	0÷999 min	15	Pr2
dAO	Alarm delay at start up	0÷23h 50min	1.3	Pr2
So1	Out1 status with faulty pr.	oFF=open on=closed	oFF	Pr2
So2	Out2 status with faulty pr.	oFF=open on=closed	oFF	Pr2
tbA1	Alarm relay disabling	no; yES	yES	Pr2
AS ¹	Alarm relay polarity	CL÷oP	oP	Pr2
Lci ²	Start scale with current or voltage input	-1999÷1999	various	Pr1
Uci ²	End scale with current or voltage input	-1999÷1999	various	Pr1
OPb	Probe calibration	-Full Sc./ Full Sc.	0.0	Pr1
rES	Resolution	in=NO; dE=0,1; cE=0,01	in	Pr2
UdM	Measurement unit (temp.) (current/voltage)	°C=°C; °F= °F; 0=°C; 1=°F; 2=RH; 3=bar; 4=PSI, 5=off	various	Pr1
PbC	Kind of probe	Pt=Pt100; J=tcJ; c= tck; S=tcS; Ptc=PTC; ntc= NTC; 0-1=0÷1V; 10= 0÷10V; cur=0÷20mA	various	Pr1
P3F	3 rd wire presence	no=2 wires; yES=3 wires	no	Pr2
HES	Energy saving differential	Down Sc./ Full Sc.	0.0	Pr2
i1F	Digital input configuration	c-H / oFF / AuS / HES / EAL / bAL	EAL	Pr2
i1P	Digital input polarity	cL=closing; oP=opening	cL	Pr2
did	Alarm delay for dig. input	0÷120m	0	Pr2
Adr	Serial address	RS485 address	1	Pr2
OnF	oFF function enabling	no=not enabled; oFF=enabled	no	Pr2
Ptb	Parameter table	Readable only		Pr2
				-
rEL	Software release	Readable only		Pr2

 1 Only for XT221C; 2 Only for instrument with 4÷20mA or 0÷1V or 0÷10V

Dixell s.r.l. Z.l. Via dell'Industria, 27 32010 Pieve d'Alpago (BL) ITALY tel. +39 - 0437 - 98 33 - fax +39 - 0437 - 98 93 13 E-mail: dixell@dixell.com - http://www.dixell.com